

SIKORSKY S76

MAINTENANCE RESERVE PROGRAM

sales@eaglecopters.com | 403.250.7370 | www.eaglecopters.com



EAGLE
WORLDWIDE FLEET MANAGEMENT

FLY. LET US DO THE REST.

SIKORSKY S76 COMPONENT COVERAGE

AUTO FLIGHT

AFCS Actuator Assembly

ELECTRICAL POWER

DC Starter/Generator

FLIGHT CONTROLS

Main Rotor Servo Actuator

Main Rotor Piston

Tail Rotor Servo Actuator

Main Rotor Servo Input Control Rod

FIRE EXTINGUISHER

Fire Extinguisher Squib

Fire Bottle

FUEL

Fuel Selector Valve

FLOATS

Squib Cartridges

Cylinder Assembly

HORIZONTAL STABILIZER

Stabilizer

Stabilizer Retaining Fitting

Stabilizer Support Fitting

MAIN LANDING GEAR

Cylinder

Piston

Axle

Axle Support Fitting

Pin, Universal to Cylinder

Pin, Rod to Upper Torque Arm

Drag Brace Rod End

Upper Torque Arm

Lower Torque Arm

Lower Drag Brace

Retraction Brace

Outer Cylinder (Retraction Actuator)

Piston (Retraction Actuator)

Piston Rod End (Retraction Actuator)

MAIN ROTOR HUB

Hub

Spindle/Cuff Assembly

Spindle Nut

Spindle/Liner Assembly

Spindle Pre-Load Bolt

Spindle Droop Stop Support

Bearing Outer Race

Elastomeric Bearing Attachment Bolts

Horn

Bifilar Support Arm

Bifilar Weight

NOSE LANDING GEAR

Axle

Fork

Piston

Cylinder

Drag Brace Actuator Cylinder Terminal

Drag Brace Actuator Piston Terminal

Drag Brace Actuator Piston Rod

POWERTRAIN

Main Gear Box

Main Gear Box Quill Shaft

Main Gear Box Spline Adapter Shaft

Main Rotor Shaft

Main Gear Box Upper Housing

Main Gear Box Support Structure Fittings

Intermediate Gear Box

Tail Gear Box

Tail Gear Box Output Shaft

Tail Gear Box Flange

Tail Drive Shaft Support Assembly

ROTORS

Main Rotor Blade

Main Rotor Blade Spar

Swashplate Assembly

Swashplate Guide

Tail Rotor Outboard Retaining Plate

Tail Rotor Horn

Tail Rotor Blade

OIL

Oil Cooler Blower